

WX 400

MULTIMEDIA WORK STATION


SERVICE MANUAL

Schematic Diagrams




CODE: 270158


OPENING INSTRUCTIONS

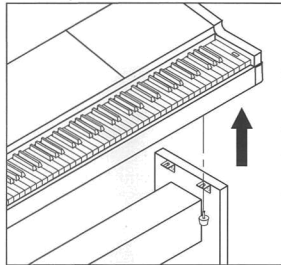

① Remove the cabinet from legs unscrewing the 4 thumb screws underneath it.

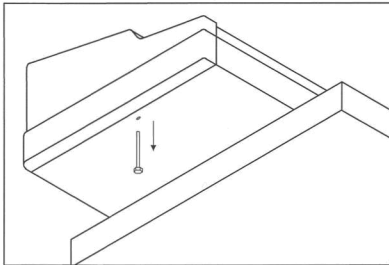

② Place the cabinet on a table, remove the 2 screws bolt at the sides as show above.

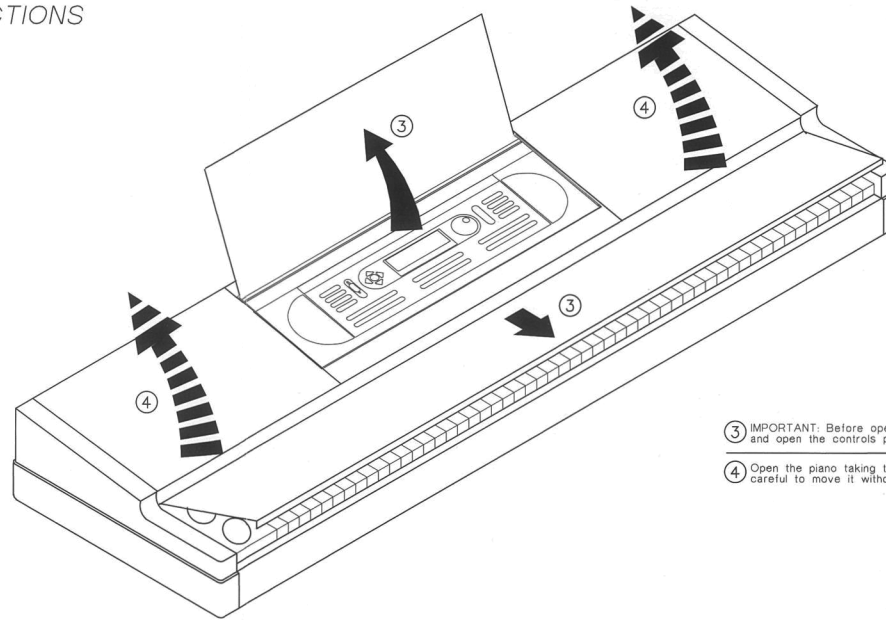


③ IMPORTANT: Before open the piano you may close the keyboard cover and open the controls panel cover.


④ Open the piano taking the top cabinet cover from left and right sides, be careful to move it without an excessive strenght, and release it slowly.

KEYBOARD DISASSEMBLING INSTRUCTIONS

① Take off the bar over the keyboard removing the screws showed below:

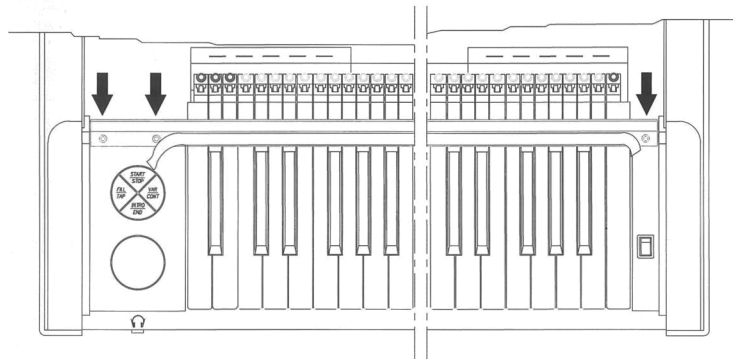

② Unfix the keyboard from chassis removing the screws showed below:

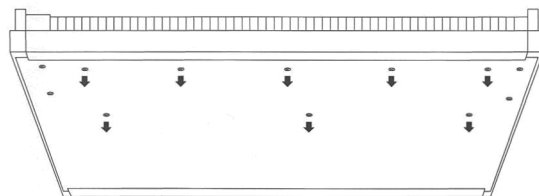


③ Now you can move back or move out the keyboard.


KEY DISASSEMBLING INSTRUCTIONS

① Remove the key return spring


②③④ Unlock the key applying not much strenght


Note: To remove a sharp key before you must remove the near natural keys.

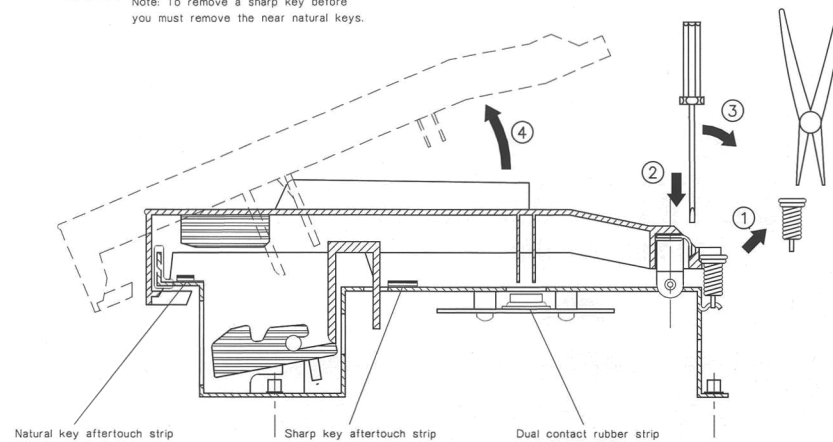

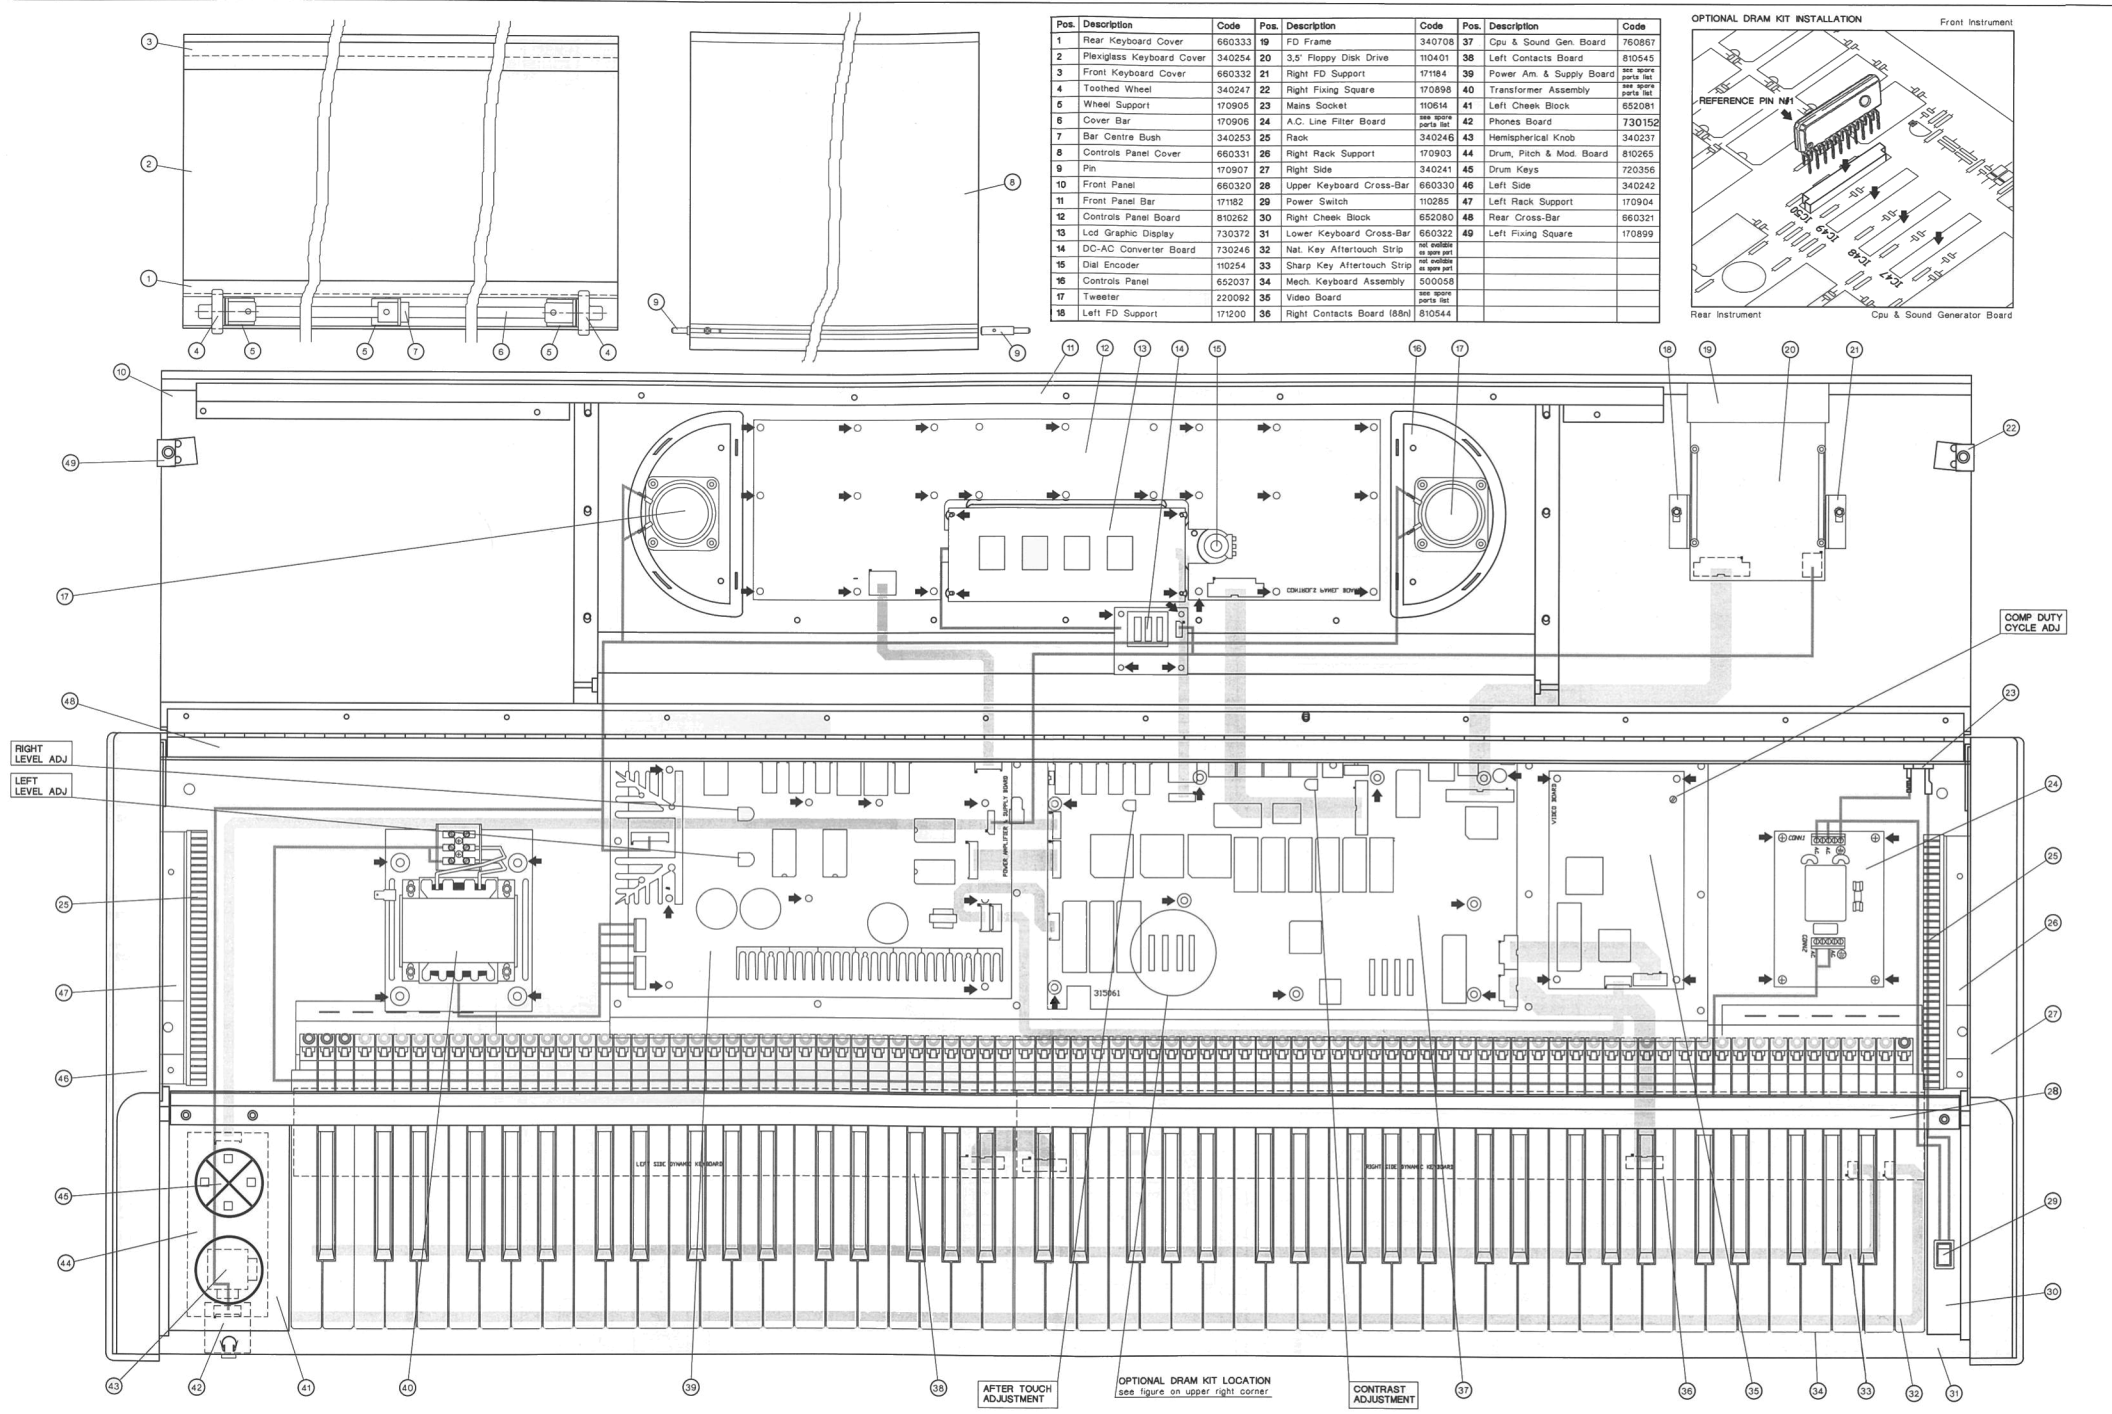




Pos.	Description	Code	Pos.	Description	Code	Pos.	Description	Code
1	Rear Keyboard Cover	660333	19	FD Frame	340708	37	Cpu & Sound Gen. Board	760861
2	Plexiglass Keyboard Cover	340254	20	3.5" Floppy Disk Drive	110401	38	Left Contacts Board	810545
3	Front Keyboard Cover	660332	21	Right FD Support	17184	39	Power Am. & Supply Board	see spare parts list
4	Toothed Wheel	340247	22	Right Fixing Square	170898	40	Transformer Assembly	see spare parts list
5	Wheel Support	170905	23	Mains Socket	110644	41	Left Cheek Block	652081
6	Cover Bar	170906	24	A.C. Line Filter Board	340246	42	Phones Board	730152
7	Bar Centre Bush	340253	25	Rack	170903	43	Hemispherical Knob	340237
8	Controls Panel Cover	660331	26	Right Rack Support	340241	44	Drum, Pitch & Mod. Board	810265
9	Pin	170907	27	Right Side	660330	45	Drum Keys	720356
10	Front Panel	660320	28	Upper Keyboard Cross-Bar	110285	46	Left Side	340242
11	Front Panel Bar	17182	29	Power Switch	652080	47	Left Rack Support	170904
12	Controls Panel Board	810262	30	Right Cheek Block	660332	48	Rear Cross-Bar	660321
13	Lcd Graphic Display	730372	31	Lower Keyboard Cross-Bar	see spare parts list	49	Left Fixing Square	170899
14	DC-AC Converter Board	730246	32	Nat. Key Aftertouch Strip	500098			
15	Dial Encoder	110254	33	Sharp Key Aftertouch Strip	see spare parts list			
16	Controls Panel	652037	34	Mech. Keyboard Assembly	220092			
17	Tweeter	172002	35	Video Board	810544			
18	Left FD Support	172001	36	Right Contacts Board (88n)				

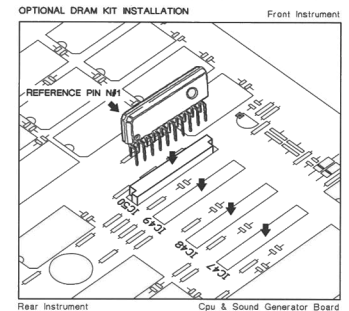


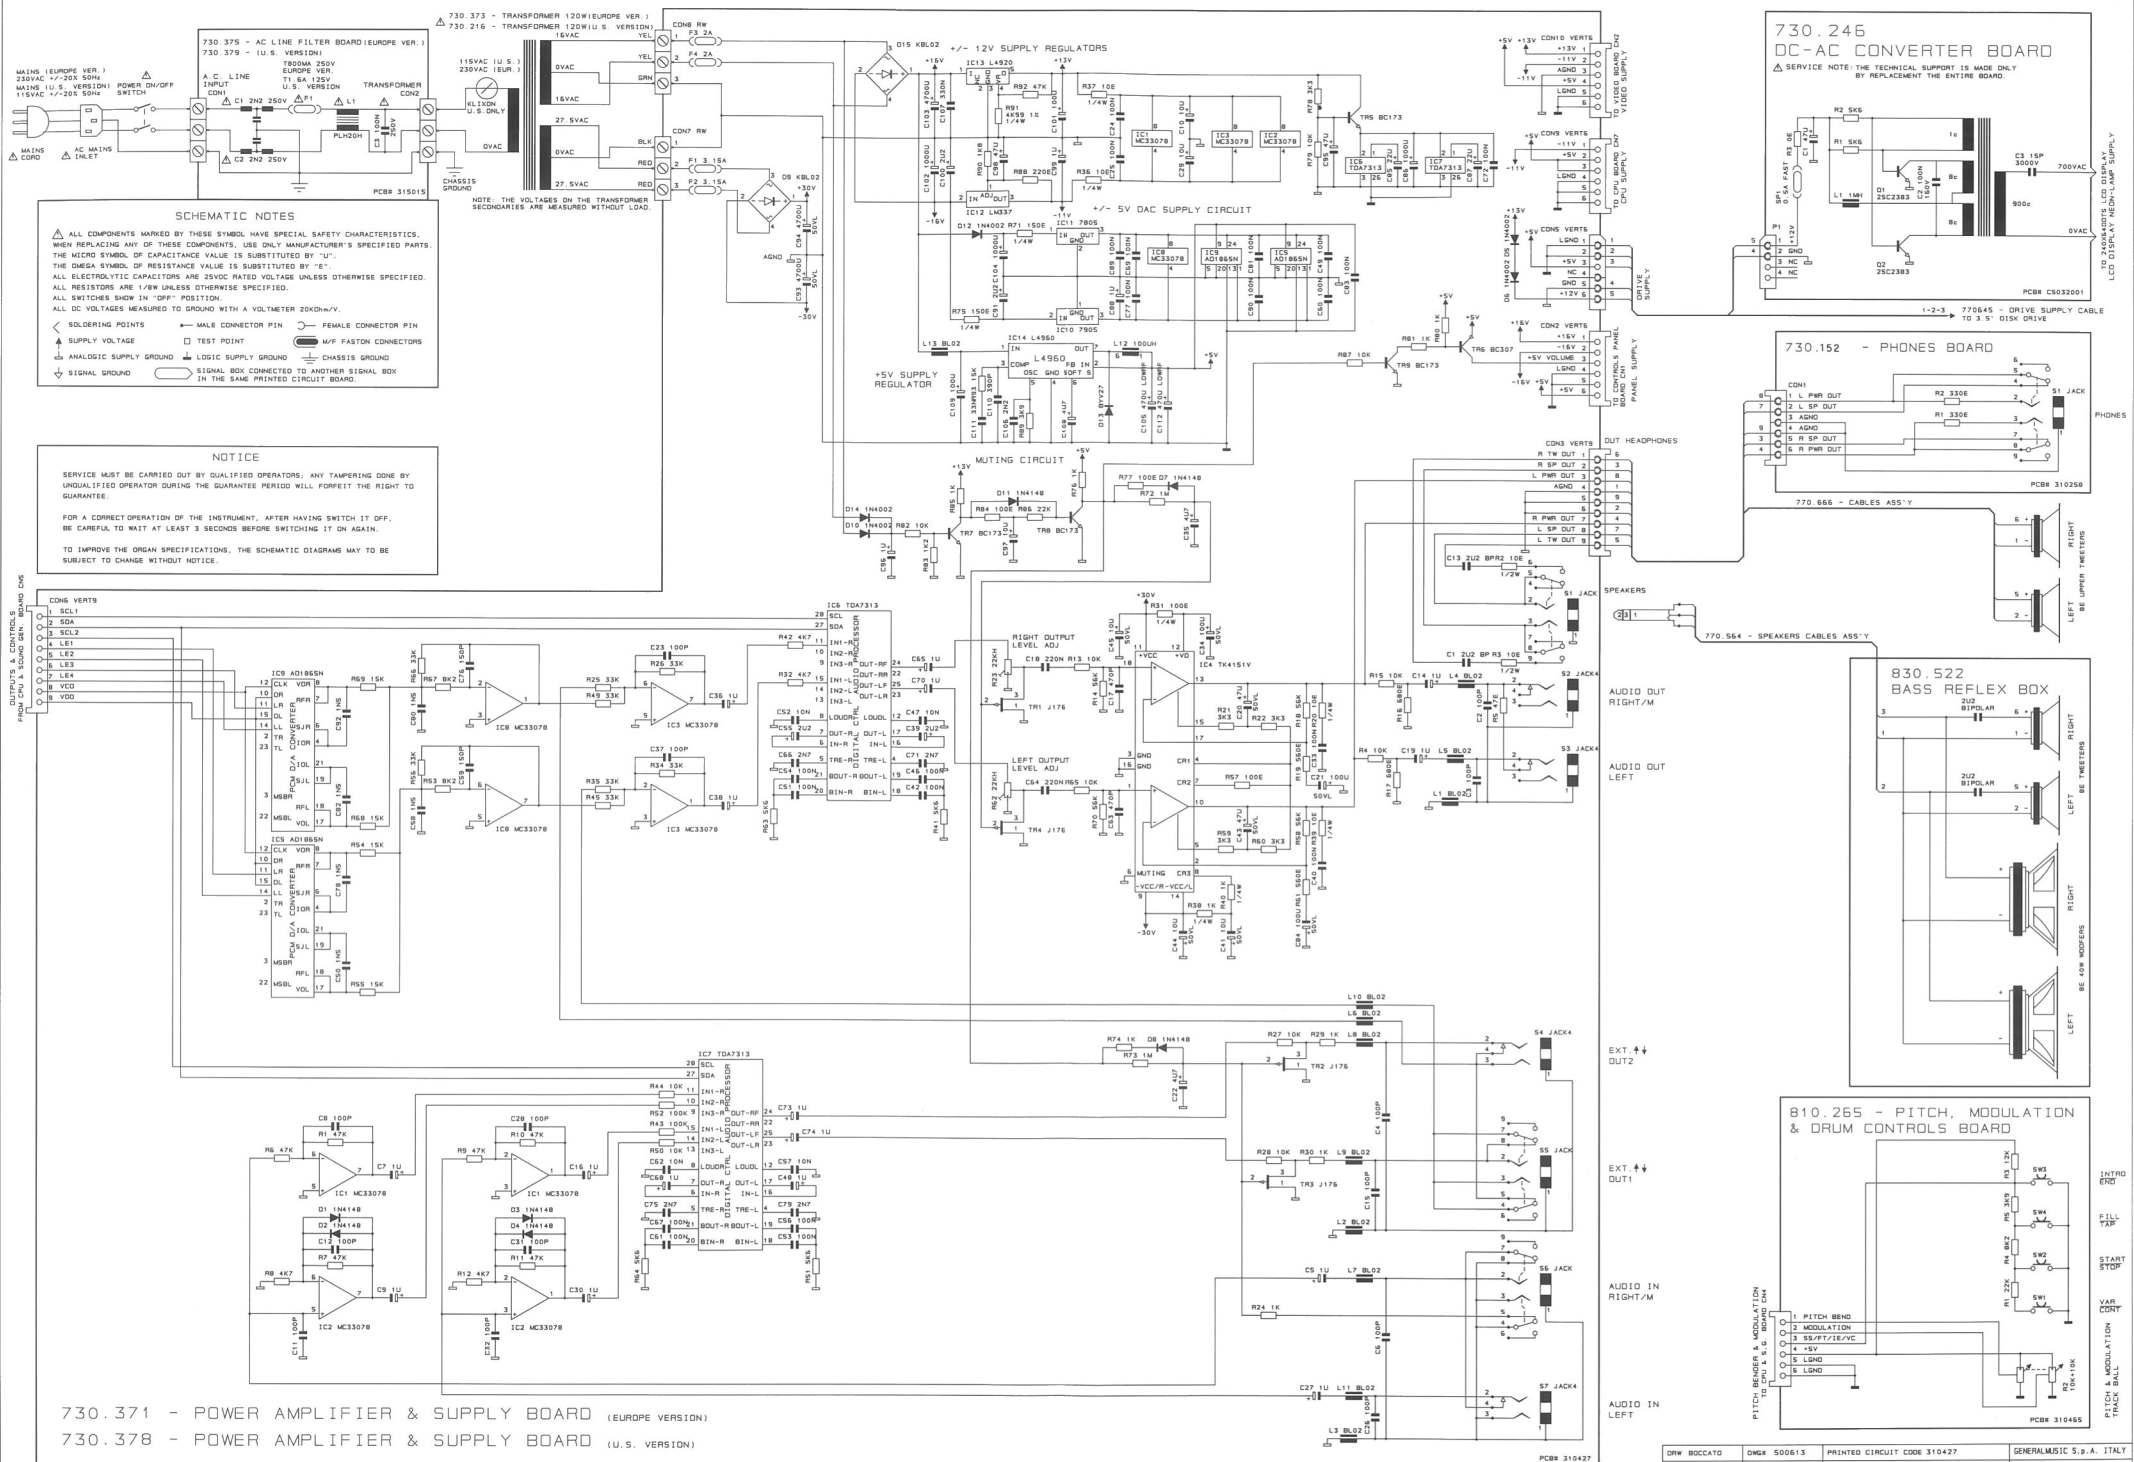


730.371 - POWER AMPLIFIER & SUPPLY BOARD (EUROPE VERSION)
730.378 - POWER AMPLIFIER & SUPPLY BOARD (U.S. VERSION)

DRW 800240	DWG 500613	PRINTED CIRCUIT CODE 310427	GENERAL MUSIC S.p.A. ITALY
CXD 810262	DISK 32PART 1/1	SCHEMATIC DIAGRAM W0400	ALL RIGHTS ARE RESERVED. NO COPIES OR REPRODUCTIONS OF THIS DOCUMENT WITHOUT WRITTEN CONSENT BY GENERAL MUSIC S.p.A.
APP. SALANTI	REV. 03-03-1994	POWER AMPLIFIER & SUPPLY BOARD DC-AC CONV., PITCH MOD., & PHONES	

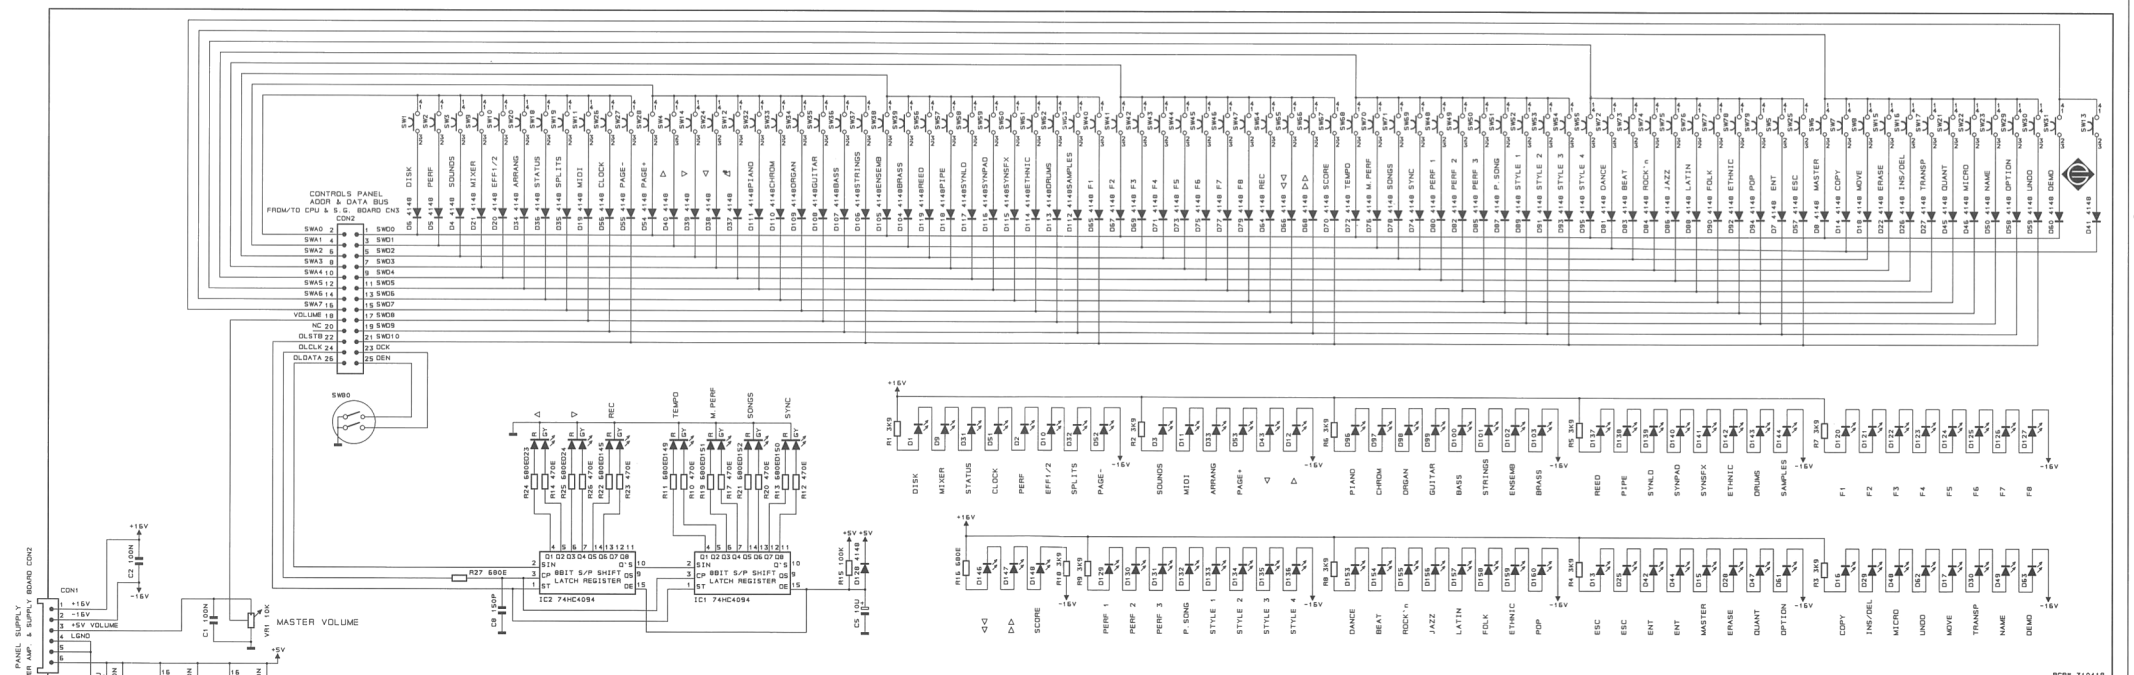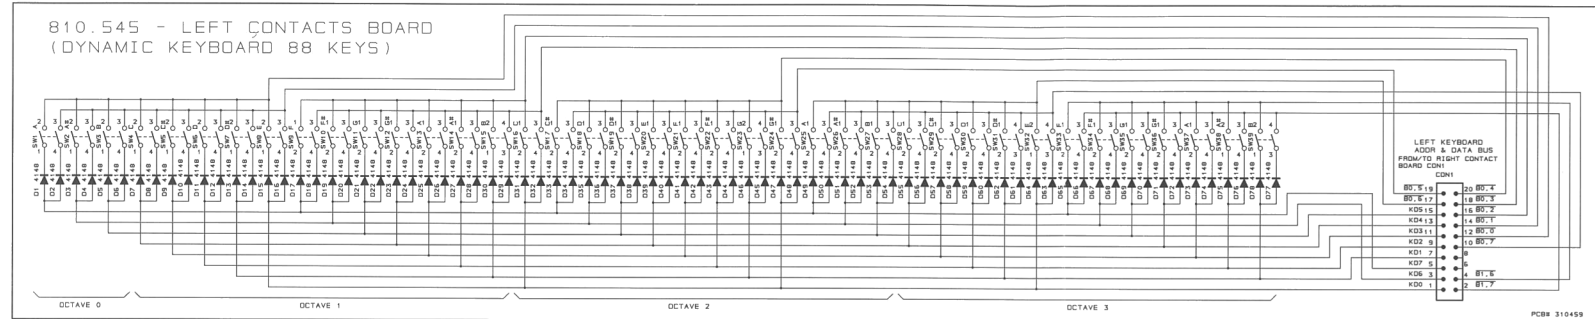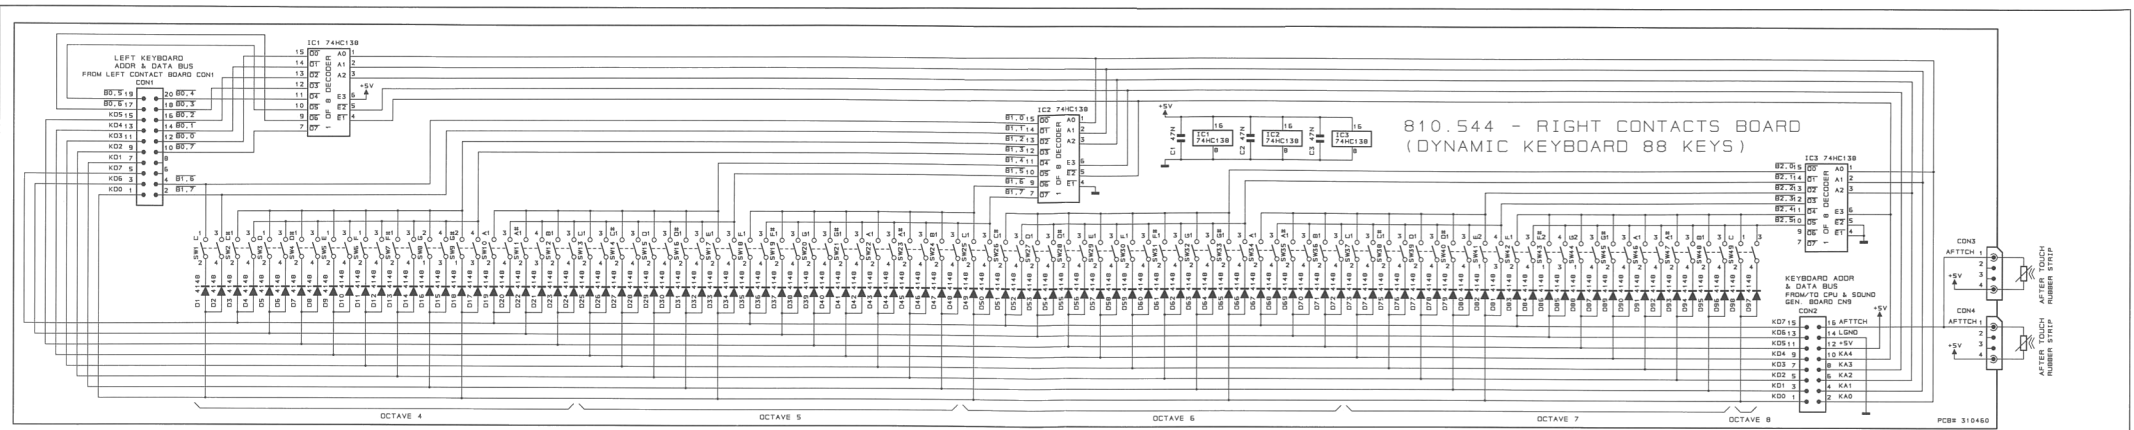

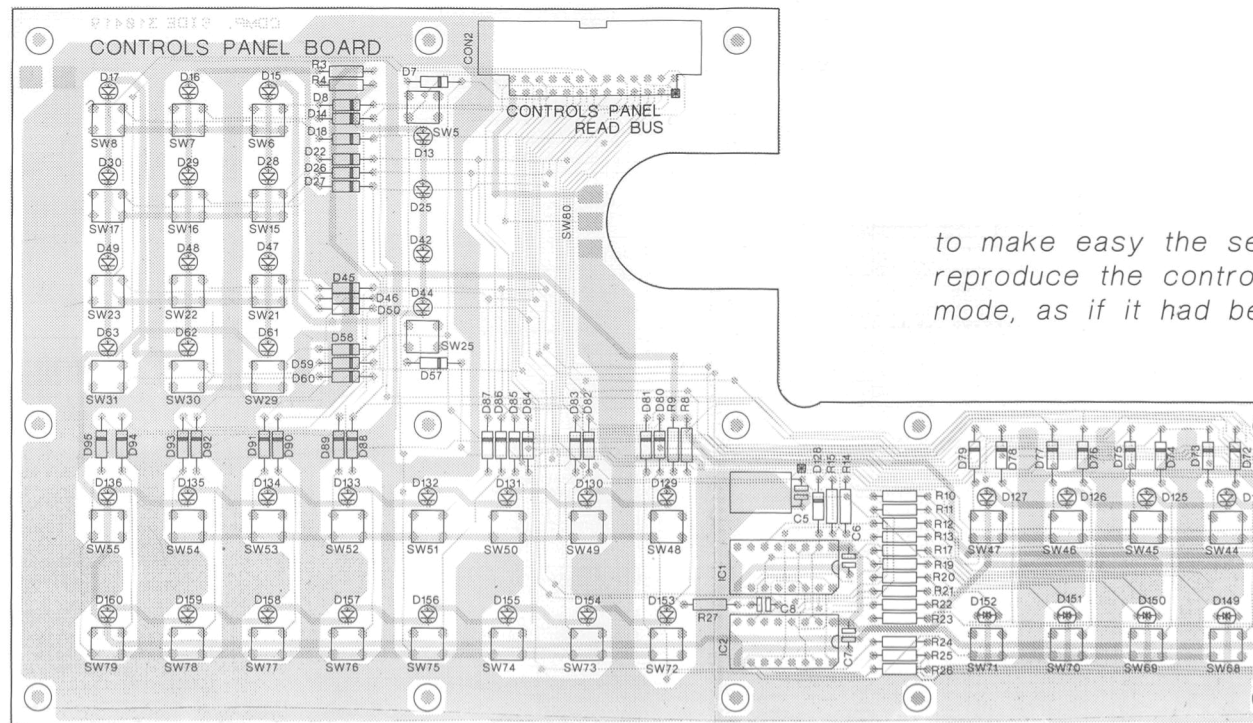


to make easy the service operations this drawing reproduce the controls panel layout in reverse mode, as if it had been printed on solder side.

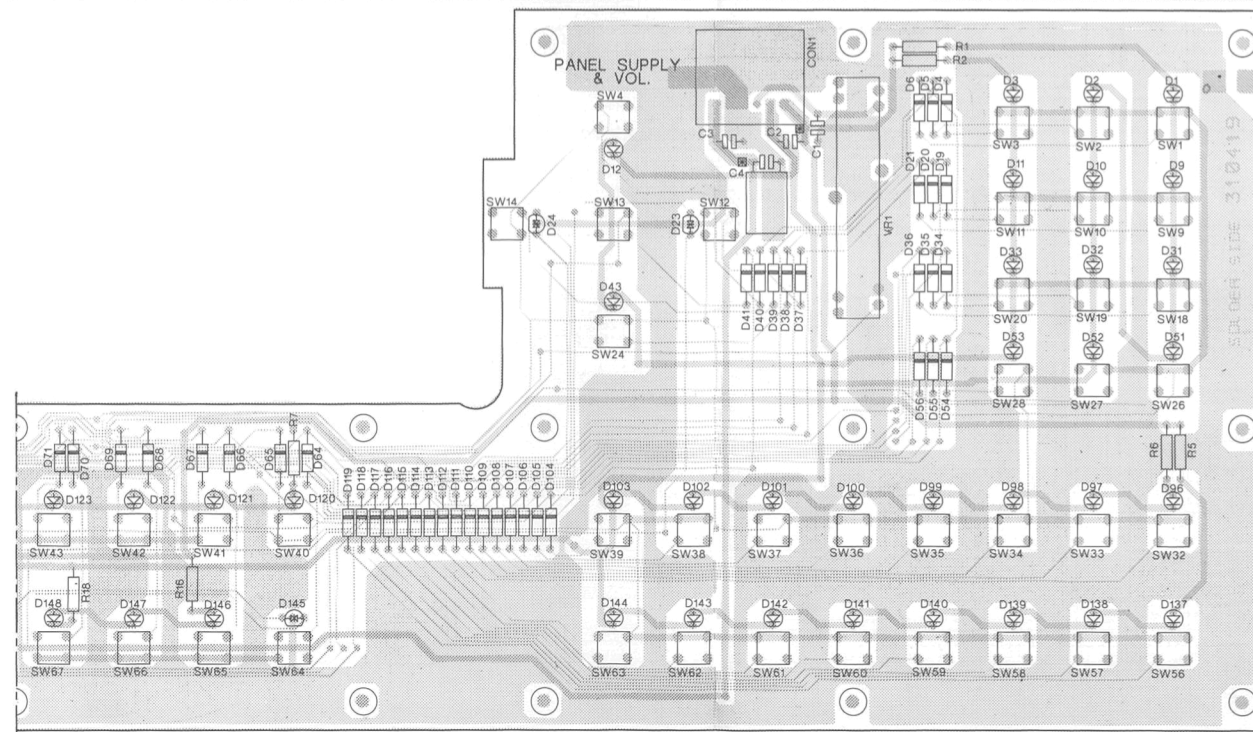





DWG BOCCATO	DWGR 500600	PRINTED CIRCUIT CODE : 315061	GENERALMUSIC S.p.A. ITALY
CKD RICCABELLI	DISK:21PART:1/2	SCHEMATIC DIAGRAM WX2 - WX400	ALL RIGHTS ARE RESERVED. NO COPIES OR REPRODUCE THIS DOCUMENT WITHOUT WRITTEN CONSENT BY GENERALMUSIC.
APP. GALANTI	REV: 21/09/93	CPU & SOUND GENERATOR BOARD	

760.867 - CPU & SOUND GENERATOR BOARD PART 2/2

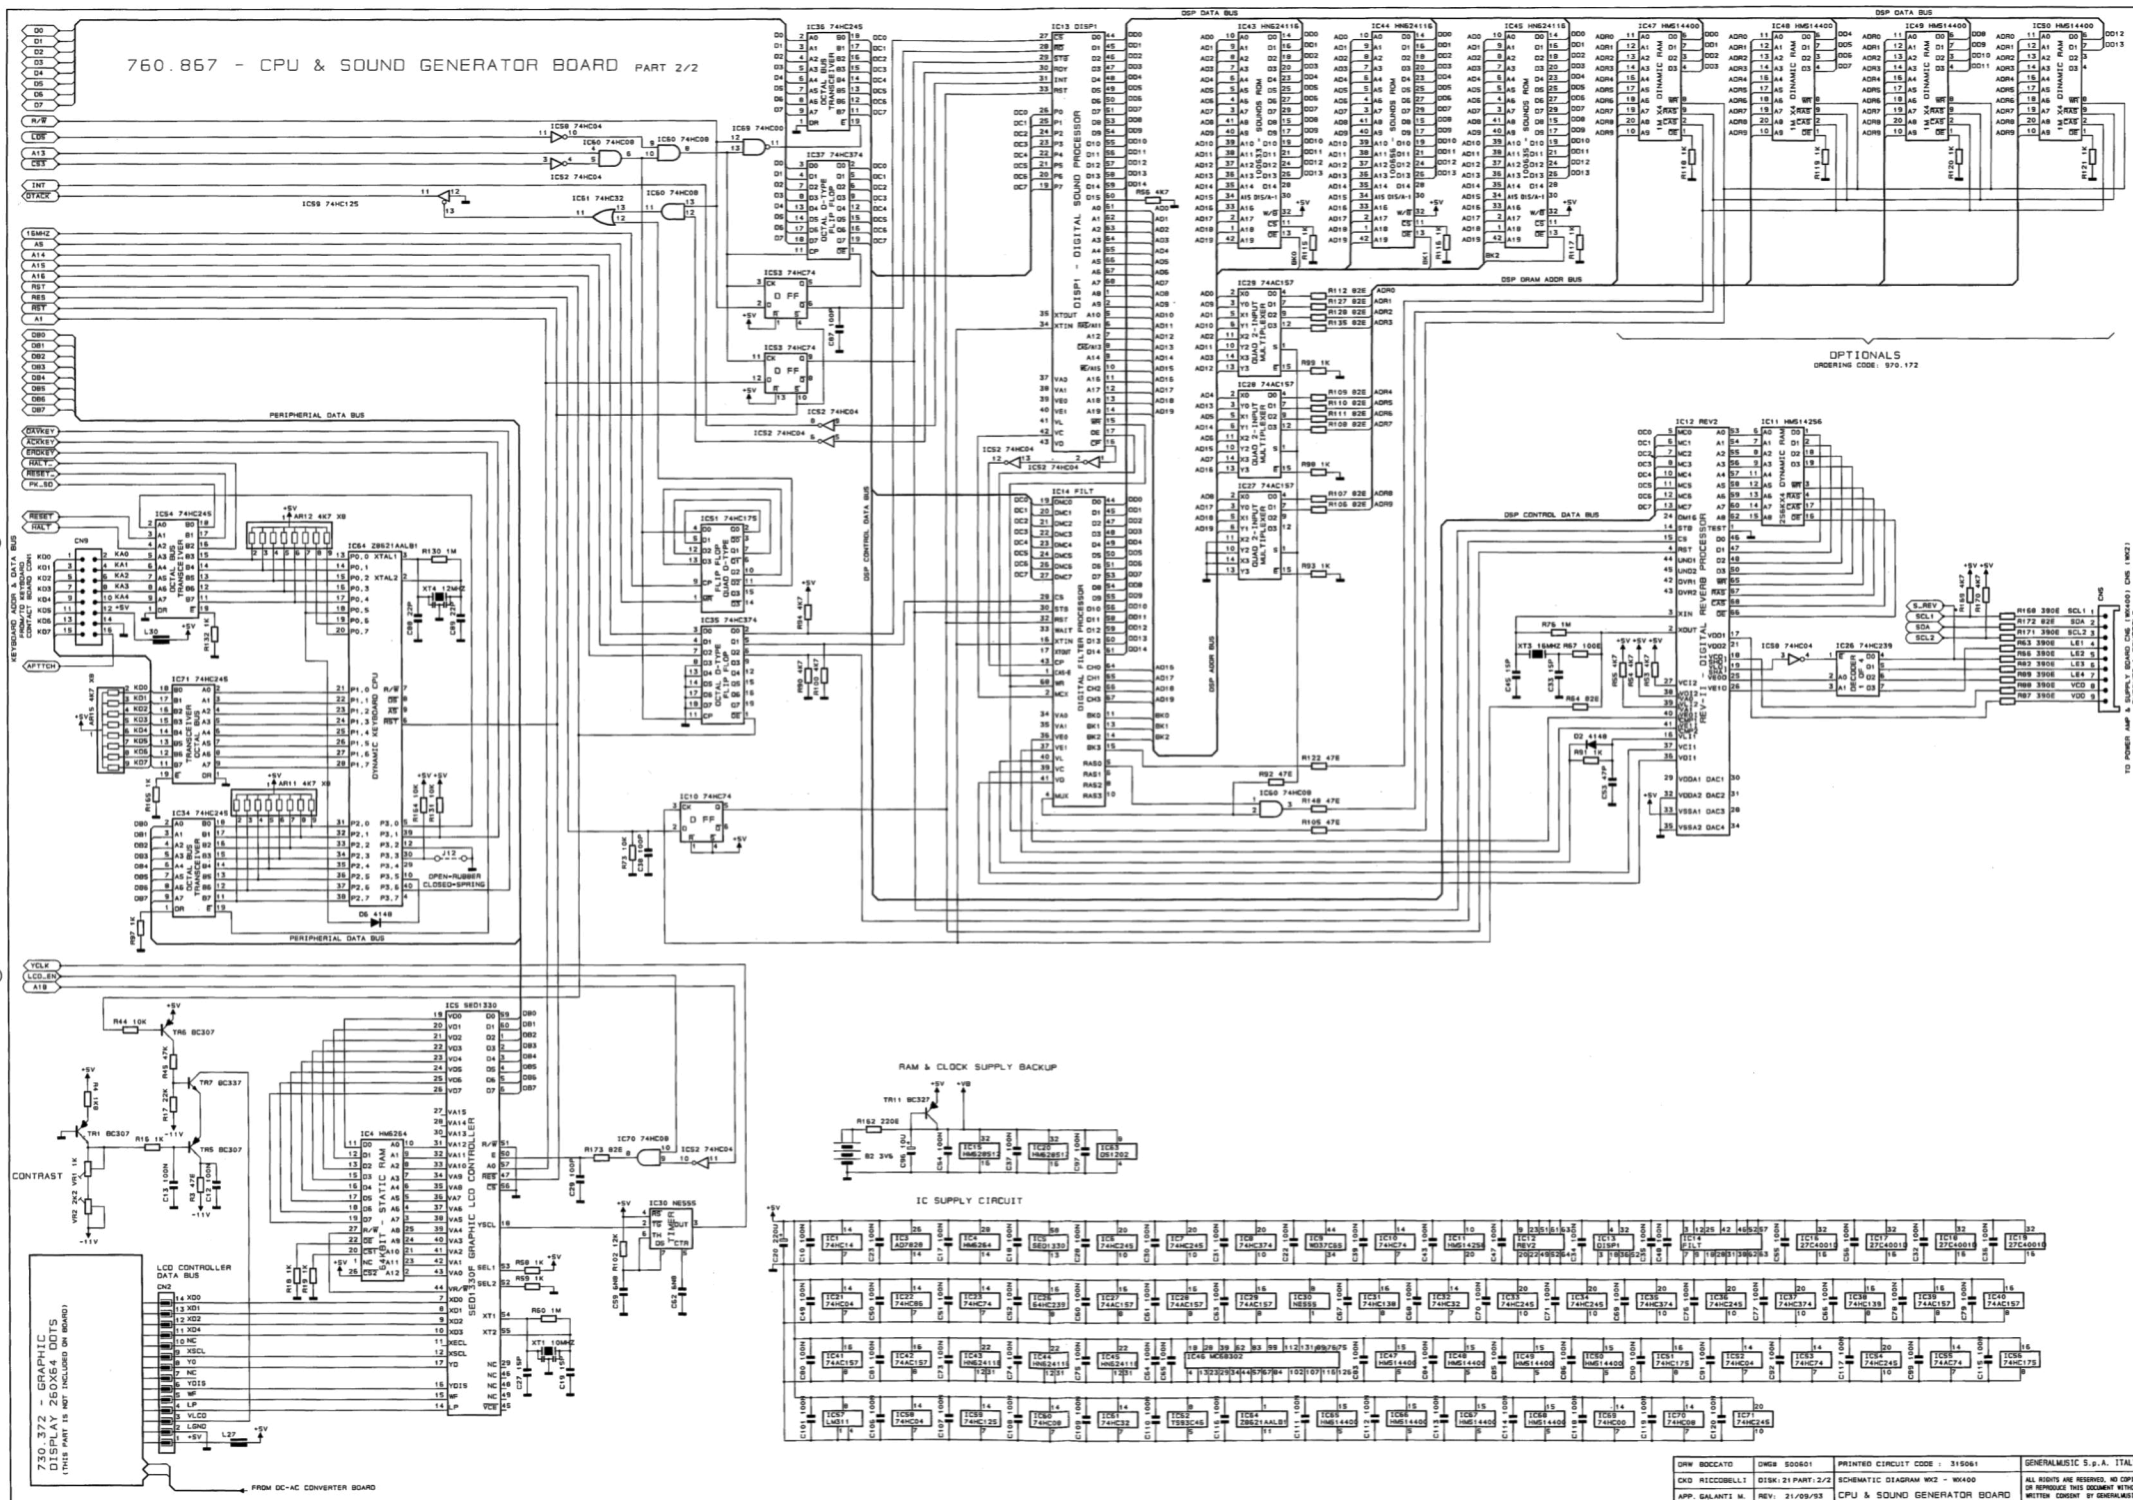


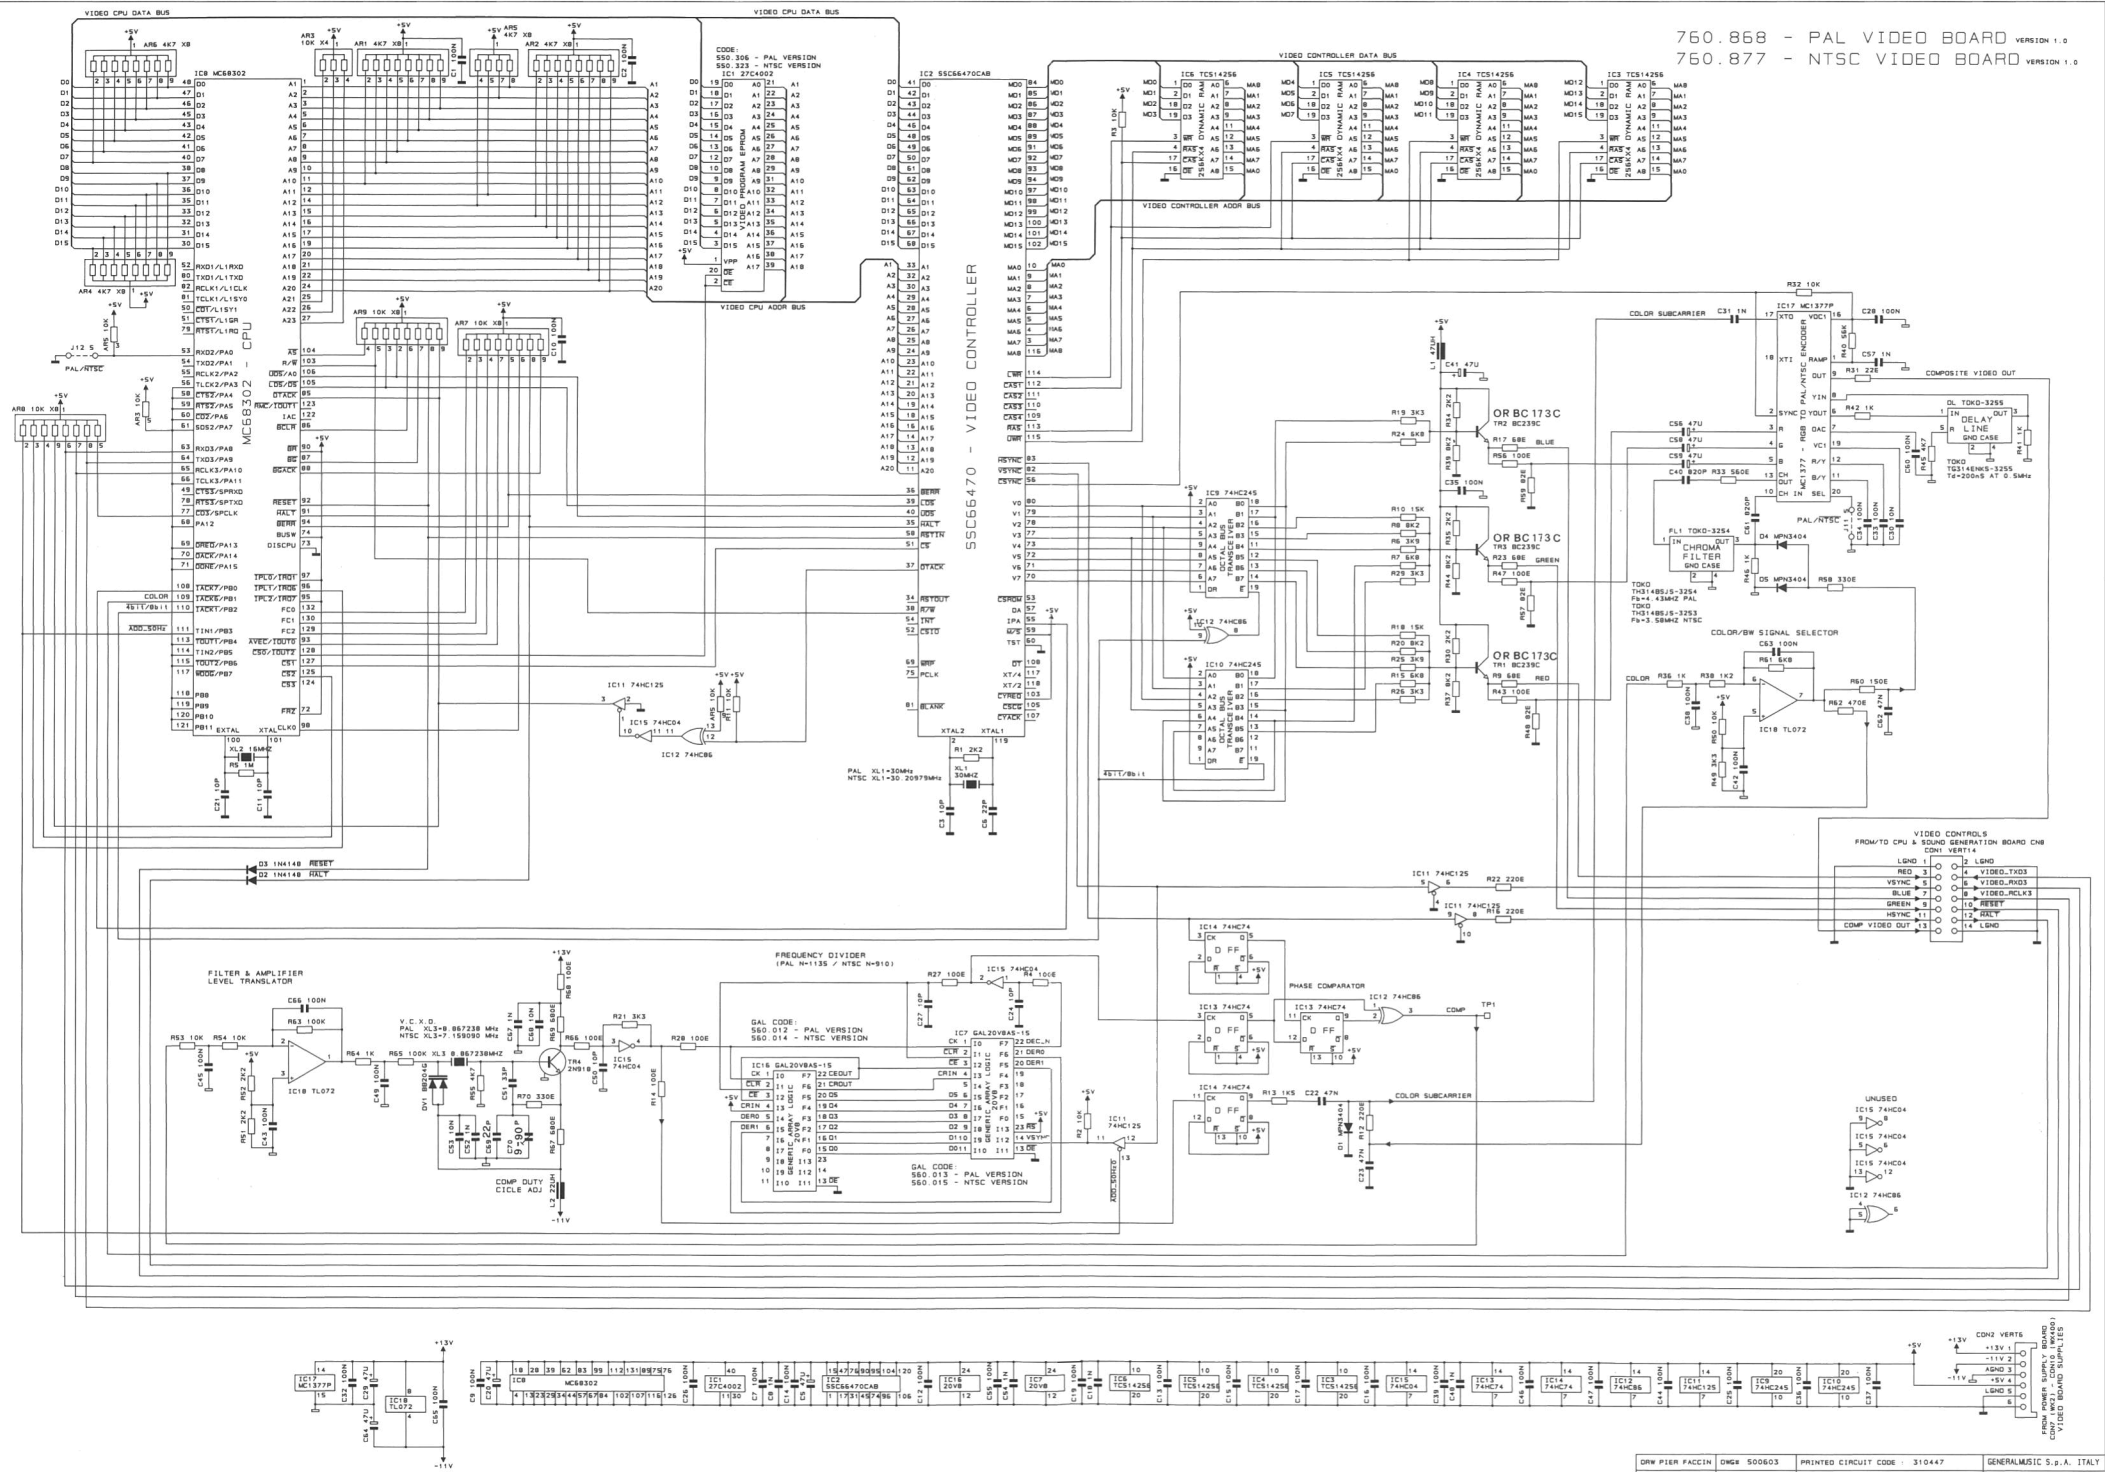


760.894 - PAL VIDEO BOARD VERSION 1.1
 760.895 - NTSC VIDEO BOARD VERSION 1.1
 NOTE: THE ONLY DIFFERENCE BETWEEN OLD AND NEW VERSION IS THE SINGLE IC DRAM

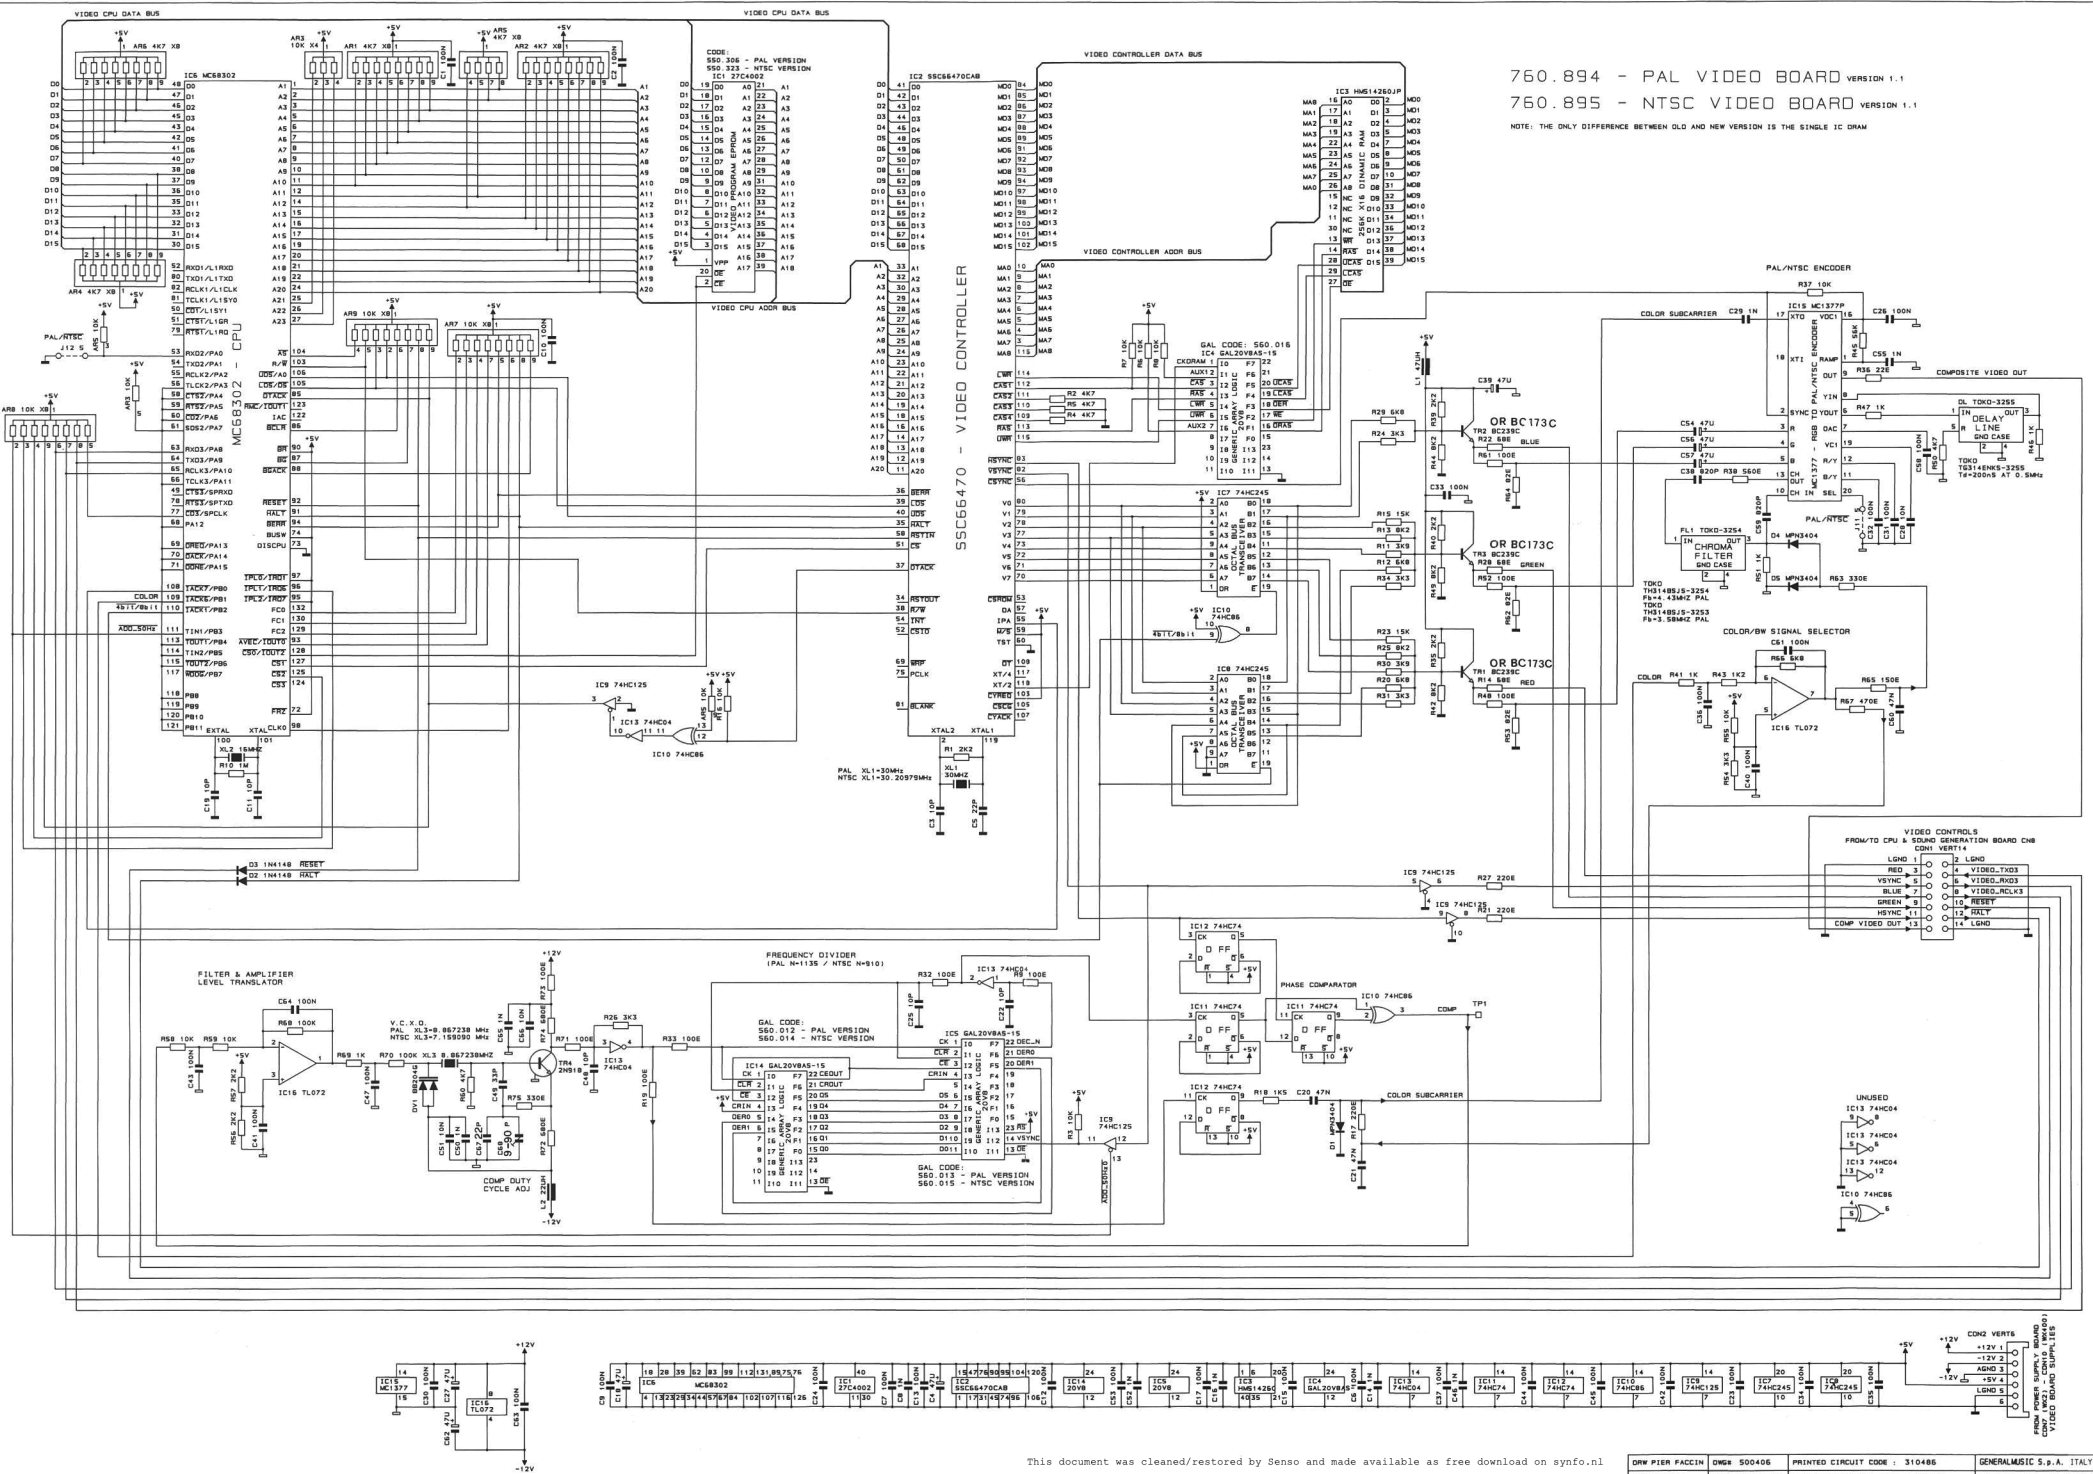

POWER ON/OFF, RESET

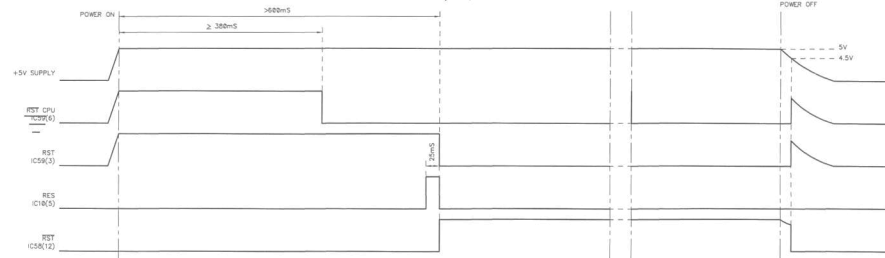


MAIN CPU — KEYBOARD CPU DATA BUS & CONTROLS

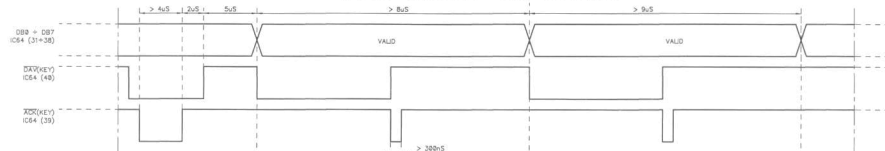


MAIN CPU — DSP1 DIGITAL SOUND PROCESSOR DATA BUS & CONTROLS (WRITE CYCLE)

THE SAME TIMING IS VALID FOR DIGITAL FILTER PROCESSORS

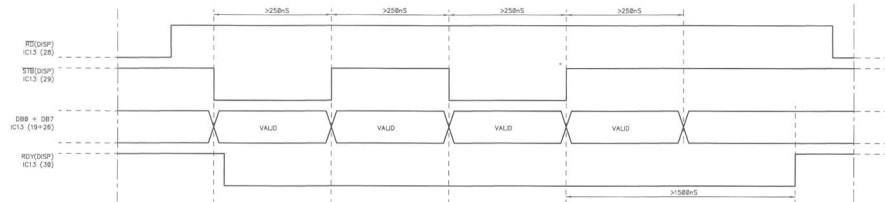

PCM SERIAL DATA BUS

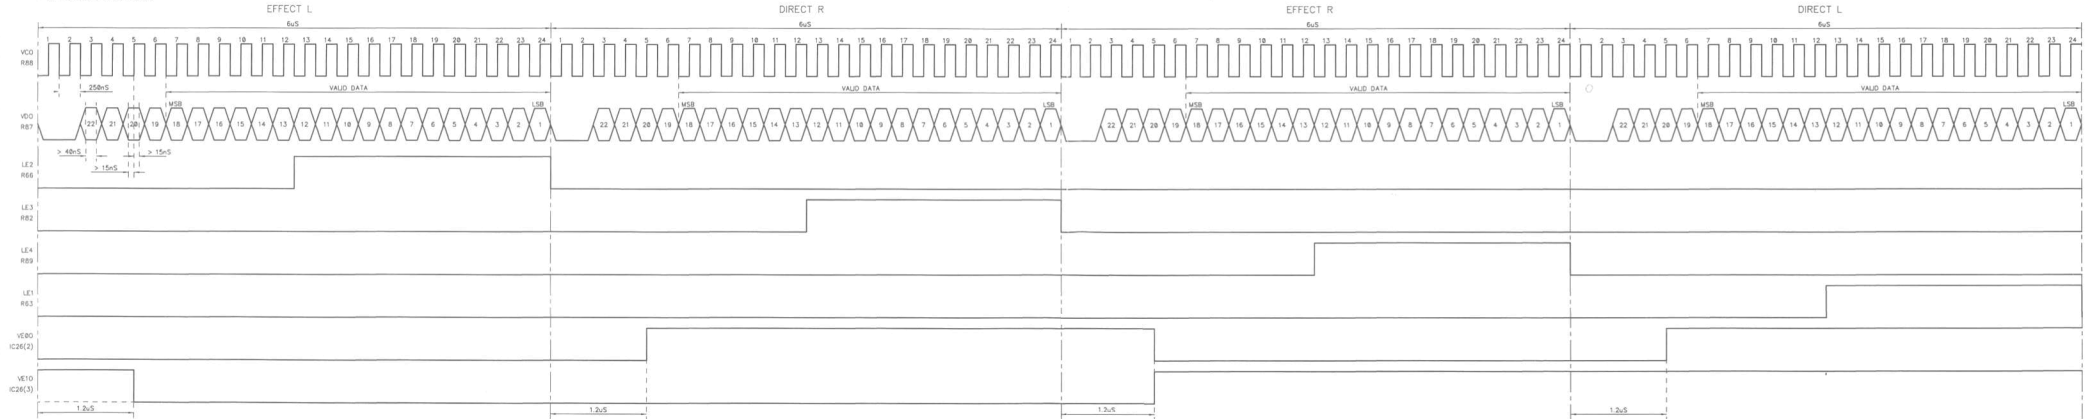


NOTE: ALL COMPONENTS PIN REFERENCE ARE LOCATED ON "CPU & SOUND GENERATOR BOARD" UNLESS OTHERWISE SPECIFIED.


ADJUSTMENT TABLE

N.	ADJUSTMENT TYPE	TEST POINT	KEY PRESSED	OPERATION POINT	READING VALUES	NOTE
1	LCD CONTRAST ADJ.	SEE NOTE	NONE	VR2 CPU & S.G. BOARD	SEE NOTE	Execute the follow instructions to set the keyboard before operate the level adjustments: Turn on the keyboard (without any disk inserted), press [DISK] press [PAGE+] 3 times, press [ENT] 2 times to format the static ram (ATTENTION this operation will destroy all data on it), turn off and turn on again the keyboard, press [REED] select OBOE from display pressing [FS] put the MASTER VOLUME at max position, now the keyboard is set to operate the level adjustment.
2	COMP DUTY CYCLE ADJ.	TP1 VIDEO BOARD	NONE	C78 VIDEO BOARD	SEE NOTE	PUT THE CONTRAST CONTROL VR1 AT CENTRE POSITION, TURN THE VR2 TRIMMER TO OBTAIN THE BEST CONTRAST SHOWN ON DISPLAY.
3 WX2	RIGHT LEVEL ADJ.	R8 SIDE IC4 POWER AMP. BOARD	C3	R17 PWR AMP BOARD	5 Vpp	SET THE OSCILLOSCOPE ON D.C. AT 1V/div. 50µs/div. TURN THE TRIMMER TO HAVE DUTY CYCLE MORE CLOSE AS POSSIBLE TO 50%. VERIFY THE ADJUSTMENT WITH A MONITOR ATTACHED TO VIDEO OUT TV SOCKET.
4 WX2	LEFT LEVEL ADJ.	R9 SIDE IC7 POWER AMP. BOARD	C3	R47 PWR AMP BOARD	5 Vpp	SET THE KEYBOARD AS INDICATED ABOVE, SET THE OSCILLOSCOPE ON D.C. AT 1V/div. 5ms/div., ACTIVE THE NOTE KEY WITH THE HIGHEST PRESSURE, TURN THE TRIMMER TO HAVE EXACTLY OUTPUT VOLTAGE.
5 WX2	AFTER TOUCH ADJ.	R38	ANY NOTE	VR3 CPU & S.G. BOARD	~2Vcc	SET THE KEYBOARD AS INDICATED ABOVE, SET THE OSCILLOSCOPE ON D.C. AT 1V/div. 5ms/div., ACTIVE THE NOTE KEY WITH THE HIGHEST PRESSURE, TURN THE TRIMMER TO HAVE EXACTLY OUTPUT VOLTAGE.
3 WX400	RIGHT LEVEL ADJ.	R15 SIDE IC4 POWER AMP. BOARD	C3	R23 PWR AMP BOARD	14 Vpp	APPLY A 700 grams WEIGHT ON THE KEY FRONT END, TO OBTAIN A VALID MEASURE PRESS THE KEY NOTE TWO OR THREE TIMES WITH MORE PRESSURE, TURN THE TRIMMER TO HAVE THE VALUE SPECIFIED.
4 WX400	LEFT LEVEL ADJ.	R4 SIDE IC4 POWER AMP. BOARD	C3	R62 PWR AMP BOARD	14 Vpp	SET THE KEYBOARD AS INDICATED ABOVE, SET THE OSCILLOSCOPE ON D.C. AT 1V/div. 5ms/div., ACTIVE THE NOTE KEY WITH THE HIGHEST PRESSURE, TURN THE TRIMMER TO HAVE EXACTLY OUTPUT VOLTAGE.
5 WX400	AFTER TOUCH ADJ.	R38	ANY NOTE	VR3 CPU & S.G. BOARD	~2Vcc	APPLY A 1350 grams WEIGHT ON THE KEY FRONT END, TO OBTAIN A VALID MEASURE PRESS THE KEY NOTE TWO OR THREE TIMES WITH MORE PRESSURE, TURN THE TRIMMER TO HAVE THE VALUE SPECIFIED.


REVERB CPU — DIGITAL REVERB PROCESSOR DATA BUS & CONTROLS

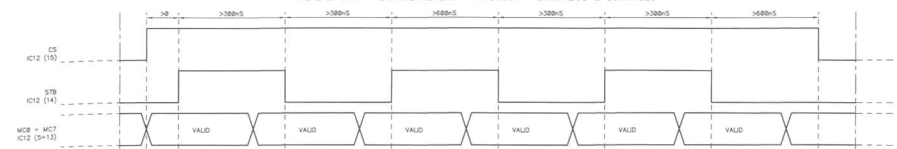


MAIN CPU — LCD CONTROLLER DATA BUS & CONTROLS

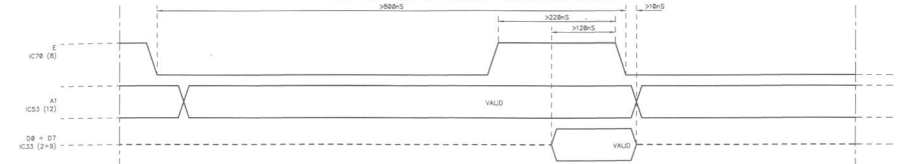

MAIN CPU — FLOPPY DISK CONTROLLER DATA BUS & CONTROLS (READ CYCLE)

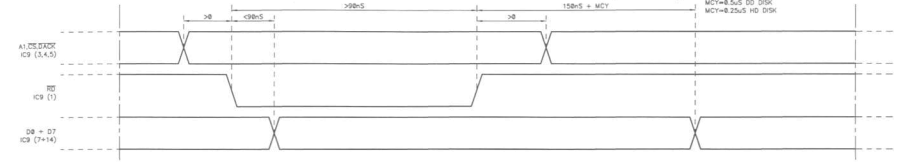

MAIN CPU — FLOPPY DISK CONTROLLER DATA BUS & CONTROLS (WRITE CYCLE)

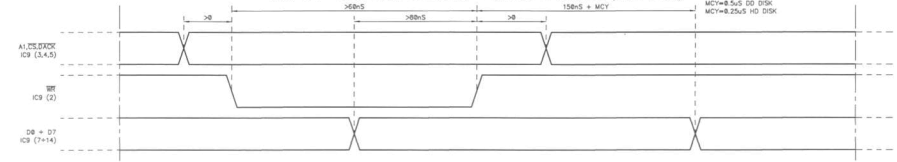

270969	OWNER'S MANUAL (ENGLISH VERSION)
270947	OWNER'S MANUAL (ITALIAN VERSION)
270950	OWNER'S MANUAL (FRENCH VERSION)
270951	OWNER'S MANUAL (GERMAN VERSION)
270952	OWNER'S MANUAL (SWEDISH VERSION)
270953	OWNER'S MANUAL (DUTCH VERSION)
270954	OWNER'S MANUAL (SPANISH VERSION)
955104	VIDEO-CASSETTE (ENGLISH VERSION)
955101	VIDEO-CASSETTE (ITALIAN VERSION)
955102	VIDEO-CASSETTE (FRENCH VERSION)
955103	VIDEO-CASSETTE (GERMAN VERSION)
955107	VIDEO-CASSETTE (SWEDISH VERSION)
955105	VIDEO-CASSETTE (DUTCH VERSION)
955106	VIDEO-CASSETTE (SPANISH VERSION)
955082	DEMO DISK WX SERIES
130274	MAINS CABLE (EUROPE VERSION)
130276	MAINS CABLE (U.S. VERSION)
130318	DIN/RGB TO RCA VIDEO CABLE
130317	DIN/RGB TO SCART VIDEO CABLE

130301	2M MIDI CABLE
970046	BENCH
970085	CONTROL PEDALBOARD
970172	1M SAMPLE DRAM EXPANSION KIT
970136	NTSC VIDEO KIT
970135	PAL VIDEO KIT

970171	STAND KIT
260308	* WOODEN PARTS INCLUDING:
	** 42307-A3W RIGHT LEG
	** 42308-A3W LEFT LEG
	** 42309-A3W PEDAL CROSS BAR

340102	** PLASTIC FOOT
170768	** METAL FOOT SUPPORT
170763	** LEG-CROSS BAR FITTING
170758	** LEG-CABINET FITTING
120086	** ASSEMBLING SCREW BOLT
120680	** ASSEMBLING JOINT-NU
190180	** HEXAGONAL ROD SPANNER
150618	** THUMB SCREW
340116	** ADJUSTABLE AMP FOR PEDALS CABLE
210017	** ADESIVE BLACK FELT
830522	** BASS REFLEX BOX ASSEMBLY
260306	** WOODEN BOX
210074	** BLACK ACOUSTIC CLOTH
220093	** 8E 40W WOOFER SPEAKER
220087	** 8E TWEETER SPEAKER
030952	** 2u2 BIPOLAR CROSSOVER CAPACITOR
770564	** SPEAKER CABLES ASSEMBLY (WITH MALE JACK)
720353	** PEDALS ASSEMBLY
190181	** PEDALS CLOG
340105	** PLASTIC SUPPORT
170767	** METAL SUPPORT
170874	** LEFT PEDAL
170873	** CENTRE PEDAL
170875	** RIGHT PEDAL
170777	** PEDAL RETURN SPRING
190015	** ADESIVE RUBBER
210017	** BLACK FELT
190178	** PERMANENT MAGNET
810168	** REED SWITCH BOARD (PCB#310272)
130271	** PEDAL CABLE

660331	CONTROLS PANEL COVER
170907	PIN
120020	PIN SCREW
340254	PLEXIGLASS KEYBOARD COVER
660332	FRONT KEYBOARD COVER
660333	REAR KEYBOARD COVER
120243	COVER FIXING SCREW
170906	COVER BAR
170905	WHEEL SUPPORT
340247	TOOTHED WHEEL
340253	BAR CENTRE BUSH
660320	FRONT PANEL
171182	FRONT PANEL BAR
70899	LEFT FIXING SQUARE
70898	RIGHT FIXING SQUARE
852037	CONTROLS PANEL
220092	8E TWEETER
171183	TWEETER GRID
340708	FD FRAME
171200	LEFT FD SUPPORT
171184	RIGHT FD SUPPORT
10401	3.5" FLOPPY DISK DRIVE
730372	GRAPHIC DISPLAY 280x64 DOTS
306060	* 14Wires x 30 Cm MYLAR FLAT CABLE
352028	DISPLAY GLASS
352000	<DISK> <PERF> <SOUNDS> TRIPLE PUSH CAP
352001	<MIXER> <EFF1/2> <MIDI> TRIPLE PUSH CAP
352002	<STATUS> <SPLITS> <ARRANG> TRIPLE PUSH CAP

552003 <CLOCK> <PAGE> <PAGE> TRIPLE PUSH CAP
552004 <MASTER> <COPY> <MOVE> TRIPLE PUSH CAP
552005 <ERASE> <INS/DEL> <TRANS> TRIPLE PUSH CAP
552006 <QUANT> <MICRO> <NAME> TRIPLE PUSH CAP
552007 <OPTION> <UNDO> <DEMO> TRIPLE PUSH CAP
552008 <PIANO> <CHROM> <ORGAN> <GUITAR> QUAD PUSH CAP
552009 <REED> <PIPE> <SYNLD> <SYNPAD> QUAD PUSH CAP
552010 <REC> < < < >> >> <SCORE> QUAD PUSH CAP
552011 <PERF1> <PERF2> <PERF3> <P.SONG> QUAD PUSH CAP
552012 <DANCE> <BEAT> <ROCK'N> <JAZZ> QUAD PUSH CAP
552013 <F1> <F2> <F3> <F4> QUAD PUSH CAP
552014 <BASS> <STRING> <ENSEMB> <BRASS> QUAD PUSH CAP
552015 <SYNSFX> <ETHNIC> <DRUMS> <SAMPLES> QUAD PUSH CAP
552016 <TEMPO> <SYNCH> <M.PERF> <SONGS> QUAD PUSH CAP
552017 <STYLE1> <STYLE2> <STYLE3> <STYLE4> QUAD PUSH CAP
552018 <LATIN> <FOLK> <ETHNIC> <POP> QUAD PUSH CAP
552019 <F5> <F6> <F7> <F8> QUAD PUSH CAP
552020 QUADRUPLE ARROW PUSH CAP
552021 <ENT> <ESC> DUAL PUSH CAP
552026 PUSH CAP MARKED WITH GENERALMUSIC LOGO
340364 DIAL KNOB
120960 DIAL STEEL SPHERE
110254 DIAL ROTARY ENCODER WITH SNAP
340701 SLIDE POTENTIOMETER KNOB
190211 DC-AC CONVERTER INSULATION SCREEN
730246 DC-AC CONVERTER BOARD (PCB# C5032001)
340370 CONTRAST KNOB
340246 RACK
170904 LEFT RACK SUPPORT
170903 RIGHT RACK SUPPORT
340242 LEFT SIDE (CABINET)
340241 RIGHT SIDE (CABINET)
600322 LOWER KEYBOARD CROSS BAR
600330 UPPER KEYBOARD CROSS BAR
600321 REAR CROSS BAR
110614 MAINS SOCKET
652080 RIGHT CHEEK BLOCK
170900 RIGHT CHEEK BLOCK SUPPORT
110285 MAINS SWITCH
730375 A.C. LINE FILTER BOARD (PCB# 315015) (EUROPE VER.)
730379 A.C. LINE FILTER BOARD (PCB# 315015) (U.S. VERSION)
010719 1.2nF MAINS CAPACITOR "T" FILTER
020493 * 100nF 250VAC IEC/UL/CSA CAPACITOR
230565 * 2.5MH 250V 3A AC LINE FILTER
140010 * VERT 3WAY P=10 SCREW TERMINAL BLOCK
110113 * FUSE CLIP (EUROPE VERSION)
110015 * T800mA 250V FUSE (EUROPE VERSION)
110114 * FUSE CLIP (U.S. VERSION)
110055 * T1.6A 125V FUSE (U.S. VERSION)

770666	CABLE ASS'Y
770645	DISK DRIVE CABLE ASS'Y
840159	6 Wires x 35 Cm FLAT CABLE (PANEL SUPPLY)
840165	6 Wires x 65 Cm FLAT CABLE (VIDEO SUPPLY)
840170	6 Wires x 90 Cm FLAT CABLE (P.B. & MOD.)
840162	6 Wires x 10 Cm FLAT CABLE (CPU SUPPLY)
840202	9 Wires x 10 Cm FLAT CABLE (INPUTS & CONTROLS)
840618	26Wires x 35 Cm FLAT CABLE (CONTROL PANEL ADDR & DATA BUS)
840662	34Wires x 45 Cm FLAT CABLE (3.5" DISK DRIVE R/W BUS)
840661	14Wires x 15 Cm FLAT CABLE (KEYBOARD CONTROLS)
840580	16Wires x 25 Cm FLAT CABLE (KEYBOARD ADDR & DATA BUS)

730373	TRANSFORMER ASS'Y 120W (EUROPE VERSION)
730216	TRANSFORMER ASS'Y 120W (U.S. VERSION)

```

50058 ** MECHANICAL ASSEMBLY
151119 ** C KEY
151120 ** D KEY
151121 ** E KEY
151122 ** F KEY
151123 ** G KEY
151124 ** A KEY
151125 ** B KEY
151126 ** SHARP KEY
151127 ** FIRST A KEY
151128 ** LAST C KEY
160201 ** NATURAL KEYS RETURN SPRING
160202 ** SHARP KEYS RETURN SPRING
840526 ** 20 Wires x 10 Cm FLAT CABLE (LEFT TO RIGHT CONTACT BOARDS)
840526 ** LEFT CONTACTS BOARD (88 NOTES DYNAMIC KEYBOARD) (PCB#
310454
810544 ** RIGHT CONTACTS BOARD (88 NOTES DYNAMIC KEYBOARD) (PCB#
310460)
340212 ** 13 DUAL CONTACT RUBBER STRIP
340211 ** 12 DUAL CONTACT RUBBER STRIP
40890 ** 4 CONTACTS HOR MALE CONNECTOR
40854 ** 16 CONTACTS VERT MALE CONNECTOR
40851 ** 20 CONTACTS VERT MALE CONNECTOR
00606 ** 74HC138 1-OF-8 DECODER
080103 ** 1N4148 75V 100mA SIGNAL DIODE

```

070551 * 10K SLIDE POTENTIOMETER

820341 PITCH, MODULATION & PHONES ASS'Y

652081 ** LEFT CHEEK BLOCK
170901 ** LEFT CHEEK BLOCK SUPPORT
340089 ** 5MM SPACER
730152 ** PHONES BOARD (PCB# 310258)
142027 ** JACK STEREO SOCKET
810265 ** DRUM, PITCH & MOD. BOARD (PCB# 310465)
070700 ** 10+10K CONTROL JOYSTICK
140327 ** 6 CONTACTS HOR MALE CONNECTOR
140520 ** MICROSWITCH 15V 20mA
720356 ** DRUM CONTROL KEYS ASSEMBLY
652022 ** <START-STOP> KEY
652025 ** <INTRO-END > KEY
652024 ** <VAR-CONT > KEY
652023 ** <FILL-TAP > KEY
340239 ** KEY SUPPORT
160152 ** KEY SPRING
340237 ** PITCH E MODULATION HEMISPHERICAL KNOB
120682 ** M3 THREADED INSERT-BUSH FOR KNOB

```
550296 * 27C4001D 4MBIT EPROM <PROGRAM ODD>
550297 * 27C4001D 4MBIT EPROM <SOUND ODD>
550298 * 27C4001D 4MBIT EPROM <PROGRAM EVEN>
550299 * 27C4001D 4MBIT EPROM <SOUND EVEN>
100573 * HM6264 64KBIT STATIC RAM
```

550296	*27C4001D 4MBIT EPROM <PROGRAM ODD>
550297	*27C4001D 4MBIT EPROM <SOUND ODD>
550298	*27C4001D 4MBIT EPROM <PROGRAM EVEN>
550299	*27C4001D 4MBIT EPROM <SOUND EVEN>
100573	*HM6264 64KBIT STATIC RAM
100591	*WD37C65C FLOPPY DISK CONTROLLER
100598	*HM628128LP-10 1MBIT STATIC RAM
100596	*FILT DIGITAL FILTER PROCESSOR
100580	*DISP1 DIGITAL SOUND PROCESSOR
100628	*REV2 DIGITAL REVERB PROCESSOR
100633	*HN624017P3R3 16MBIT SOUNDS ROM
100656	*HN624116P0D7 16MBIT SOUNDS ROM
100635	*HN624017P3R3 16MBIT SOUNDS ROM
100644	*AD7828 8BIT HIPEED A/D CONVERTER
100725	*28621AALTB KEYBOARD CPU
100035	*6N13C OPTOCOUPLER
100057	*N5555 TIMER
100075	*LM311 VOLTAGE COMPARATOR
100086	*HM45256P10 1MBIT TA=100N DYNAMIC RAM
100603	*74HC104 2-INPUT NAND GATE
100602	*74HC04 HEX INVERTER
100605	*74HC125 QUAD 3-STATE BUFFER
100606	*74HC138 1 OF 8 DECODER
100609	*74HC175 QUAD D-TYPE FLIP-FLOP
100610	*74HC245 OCTAL BUS TRANSCEIVER
100612	*74HC374 OCTAL D-TYPE FLIP-FLOP
100614	*74HC74 DUAL FLIP-FLOP
100615	*74HC08 QUAD 2-INPUT AND GATE
100618	*74HC14 HEX INV SCHMITT TRIGGER
100619	*74HC32 QUAD 2-INPUT OR GATE
100620	*74HC86 QUAD 2-INPUT EXOR GATE
100623	*74HC139 DUAL 2 TO 4 LINE DECODER
100640	*MC68302 CPU

00641	*HMS1400A027 4MBIT TA-70NS DYNAMIC RAM
100642	*T939C46 1KBIT EPROM MEMORY
100647	*74HC239 DUAL 2 TO 4 LINE DECODER
100730	*SED1330 E-1330BA LCD CONTROLLER
100731	*DS1202 CLOCK CALENDAR
100920	*LM336 2.5V VOLTAGE REFERENCE
101002	*74AC74 DUAL FLIP-FLOP
101005	*74AC157 QUAD 2-INPUT MULTIPLEXER
101700	*12MHz CERAMIC RESONATOR
101704	*16MHz QUARTZ RESONATOR
101709	*10MHz CERAMIC RESONATOR
101710	*32.768Hz QUARTZ RESONATOR
071213	*Kohm CONTRAST TRIMMER
080103	*IN14148 75V 100mA SIGNAL DIODE
090152	*BC337 TO92 NPN TRANSISTOR
090153	*BC327 TO92 PNP TRANSISTOR
090182	*BC173 TO92 NPN TRANSISTOR
090192	*BC337 TO92 PNP TRANSISTOR
043023	*6 CONTACTS VERT MALE CONNECTOR
043052	*9 CONTACTS VERT MALE CONNECTOR
043053	*16 CONTACTS VERT MALE CONNECTOR
040857	*16 CONTACTS VERT MALE CONNECTOR
040858	*14 CONTACTS HORZ MALE CONNECTOR
040866	*34 CONTACTS VERT MALE CONNECTOR
040881	*14 CONTACTS VERT FEM CONNECTOR MYLAR CABLE
040882	*28 CONTACTS VERT MALE CONNECTOR
042117	*JACK STEREO SLIM SOCKET
042112	*5 POLES DIN SOCKET
042116	*6 POLES DIN SOCKET
042119	*13 POLES DIN SOCKET
042113	*RCA SOCKET
102822	*3.6V 60mA NiCd BATTERY

730371 POWER AMPLIFIER & SUPPLY BOARD (EUROPE VER.)(PCB# 310427

030378 * POWER AMPLIFIER & SUPPLY BOARD (U.S. VERSION) (PCB# 310427)
100099 * STKA151V 40-40W HYBRID POWER AMPLIFIER
100058 * 7905 -5V 1A VOLTAGE REGULATOR
100059 * 7805 +5V 1A VOLTAGE REGULATOR
100919 * MC33078 DUAL LOW NOISE J-FET OP AMP
100067 * LM337 1.2V-37V 1.5A ADJUSTABLE REGULATOR
100643 * AD1865N 2X 18BIT DAC
100900 * L4960 5-40V 2.5A SWITCHING REGULATOR
100947 * L4920 1.2-20V LOW DROP ADJUSTABLE REGULATOR
100948 * TDA7313 DIGITAL CONTROLLED AUDIO PROCESSOR
030555 * 4700U 50V 20% SNAP-IN ELECTROLYTIC CAPACITOR
030950 * 4700U 16V 20% LOW ESR VERT ELECTROLYTIC CAPACITOR
042565 * 4K99 1/4W RESISTOR MET FILM
080103 * 1N4148 75V 100mA SIGNAL DIODE
080156 * 1N4002 1A 100V RECTIFIER DIODE
080170 * FE2B 2A 100V FAST RECO. DIODE
080605 * KBL02 4A 200V BRIDGE REC DIODE
090182 * BC173 T092 NPN TRANSISTOR
090192 * BC307 T092 PNP TRANSISTOR
090856 * J176 T092 P-CHANNEL JFET TRANSISTOR
110010 * 72A 250V FUSE (EUROPE VERSION)
110003 * 73A 15A 250V FUSE (EUROPE VERSION)
110113 * FUSE CLIP (EUROPE VERSION)
110083 * 72A 125V FUSE (U.S. VERSION)
110061 * 73A 15A 125V FUSE (U.S. VERSION)
110114 * FUSE CLIPS (U.S. VERSION)
140010 * VERT 3WAY P=10 SCREW TERMINAL BLOCK
140207 * JACK STEREO SOCKET
140217 * JACK STEREO SLIM SOCKET
140351 * 6 CONTACTS VERT MALE PASS-THRU CONNECTOR
140352 * 9 CONTACTS VERT MALE CONNECTOR
140908 * 6 CONTACTS VERT MALE SMALL CONNECTOR
230524 * 100UH SWITCHING COIL

```

760688 PAL VIDEO BOARD (PCB# 310447) (EUROPE VERSION)
760687 NTSC VIDEO BOARD (PCB# 310447) (U.S. VERSION)
760694 PAL VIDEO BOARD (PCB# 310486) (EUROPE VERSION)(VERSION 1.1)
760695 NTSC VIDEO BOARD (PCB# 310486) (U.S. VERSION)(VERSION 1.1)
* 27C4001D 4MBIT EPROM <PROGRAM> (NTSC VERSION)
500013 * GAL20V8AS-15BH1 GATE ARRAY LOGIC TA=15NS (PAL VERSION)
500012 * GAL20V8AS-15BH1 GATE ARRAY LOGIC TA=15NS (PAL VERSION)
500323 * 27C4001D 4MBIT EPROM <PROGRAM> (NTSC VERSION)
500015 * GAL20V8AS-15BH1 GATE ARRAY LOGIC TA=15NS (NTSC VERSION)
500014 * GAL20V8AS-15BH1 GATE ARRAY LOGIC TA=15NS (NTSC VERSION)
500013 * GAL20V8AS-15BH1 GATE ARRAY LOGIC TA=15NS (VERSION 1.1)
ONLY 7

```

000003	* HMS14260JQ 4MBIT TA=70NS DYNAMIC RAM (VERSION
100061	* T27U2 DUAL LOW NOISE JFET OP AMP
100586	* HMS14256P10 1MBIT TA=100M DYNAMIC RAM
100602	* 74HC04 HEX INVERTER
100605	* 74HC125 QUAD 3-STATE BUFFER
100610	* 74HC245 OCTAL BUS TRANSCEIVER
100614	* 74HC74 DUAL FLIP-FLOP
100620	* 74HC86 QUAD 2-INPUT EXOR GATE
100640	* MC68302 CPU
100951	* MC1377P RGB TO ANALOG ENCODER
100402	* SSC6674OCAB VIDEO CONTROLLER
010603	* 90CPN750 CERAMIC CAPACITOR TRIMMER
010704	* 16MHZ QUARTZ RESONATOR
010714	* 30.9273MHZ QUARTZ RESONATOR (PAL VERSION)
010715	* 30.927338MHZ QUARTZ RESONATOR (PAL VERSION)
010717	* 8.867937MHZ QUARTZ RESONATOR (NTSC VERSION)
010718	* 7.159099MHZ QUARTZ RESONATOR (NTSC VERSION)
010703	* N4148 75V 100mA SIGNAL DIODE
010500	* B8204D 4V7 100V 1% FILM DIODE
010551	* NM2340A/VHF PIN SWITCHING DIODE
010912	* 2N818 VHF NPN TRANSISTOR
010912	* BC137C T092 NPN TRANSISTOR
230560	* 220U 1/2 100A RF COIL
230561	* 470U 1/2 100A RF COIL
230578	* LC CHROMA FILTER 4.43MHz PAL
230563	* LC CHROMA FILTER 3.58MHz NTSC
230564	* LC DELAY LINE 200NS 5.0MHZ
403051	* 6 CONTACTS VERT MALE CONNECTOR PASS-THRU
409010	* 14 CONTACTS VERT MALE CONNECTOR

Each spare part is single quantity unless otherwise specified.

Asterisk prefix explanation:

- Omitted = First level spare part.
- One asterisk = Second level, part of previous listed first level part.
- Two asterisk = Third level, part of previous listed second level part.
- Three asterisk =

Any request for not above mentioned part must encompass specific description including:

1) Model name, 2) Section, 3) Module code, 4) Reference name, 5) Quantity number.



WX plus upgrade kit installation instructions



CAUTION

Read these notes before proceeding


These servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock and device malfunction, do not perform any user-servicing but refer all servicing to the nearest Service Center Authorized by GENERALMUSIC. Any servicing performed by unqualified service personnel will forfeit all GUARANTEE rights and exonerate GENERALMUSIC from all liabilities for damage to property or persons resulting from device malfunction.



ATTENZIONE

Leggi queste note prima di procedere

Le seguenti istruzioni di servizio sono ad esclusivo uso di personale qualificato. Per evitare il rischio di scosse elettriche e malfunzionamenti dell'apparecchio, non tentate di effettuare personalmente queste operazioni, rivolgetevi al più vicino Centro di Assistenza Autorizzato GENERALMUSIC. Ogni intervento effettuato da personale non qualificato farà decadere i diritti di GARANZIA ed esonererà GENERALMUSIC da ogni responsabilità su eventuali danni a persone o cose conseguenti dal suo malfunzionamento.

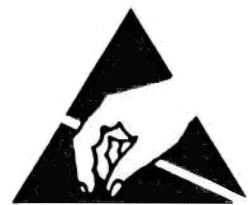

ATTENTION

Observe precautions when handling electrostatic sensitive devices.

ATTENZIONE

Maneggiare con cura i dispositivi elettronici sensibili alle cariche elettrostatiche.

- Open the instrument, locate the boards with the eproms to be replaced.
Aprire lo strumento, individuare le schede interessate alla sostituzione delle eprom.
- Replace existing eproms inside the instrument with those supplied in the upgrade kit, according to the following table:
Rimpiazzare le eprom esistenti all'interno dello strumento con quelle in dotazione al kit, come indicato nella tabella sottostante:

Model Modello	Board Name Nome Circuito	Position Posizione	Remove Rimuovere	Insert Inserire
WX2-WX400	Cpu & Sound Generator Board (315061)	IC19	550299	550504
		IC18	550298	550503
		IC17	550297	550502
		IC16	550296	550501
		IC1	550306 / 550360	550505
video versions	Pal Video Board (310447 or 310486)	IC1	550306 / 550360	550505
	Ntsc Video Board (310447 or 310486)	IC1	550323 / 550359	550506
WX expander	Cpu & any Video Board (315064)	IC50	550299	550504
		IC49	550325	550508
		IC48	550297	550502
		IC47	550324	550507
		IC34	550306 / 550360	550505
video versions	Cpu & Pal Video Board (315064)	IC34	550323 / 550359	550506

➤ WX2-WX400:

Place the first "plus" sticker on the front panel above the disk drive, and the second on the rear panel close to the

"WX..." logo.

Applicare il primo adesivo "plus" sul pannello frontale, sopra il disk drive, e il secondo sul retro dopo la scritta "WX..."


WX expander:

Place the "plus" sticker on the rear panel close to the "WX..." logo.

Applicare l'adesivo "plus" sul retro dopo la scritta "WX..."

IMPORTANT: Part below to be filled in by the service center.


IMPORTANTE: Fate compilare al servizio di assistenza la parte sottostante.

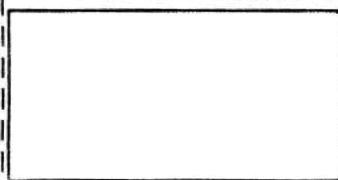

Stamp of Service Center
Authorized by Generalmusic
Timbro Centro Assistenza
Autorizzato da Generalmusic



 Device serial number / Numero di serie apparecchio



Installation date / Data installazione